



Important Information ***Urgent Reading***

SALES ◦ COMPLETE SERVICES ◦ PARTS ◦ PHONE: 609-752-0321 ◦ FAX: 609-752-0320

Paxton 1500SL / 2200SL Maintenance Schedule

Check the fluid level using the dipstick periodically. Initial supercharger fluid change must be performed at 2,500 miles.

The supercharger fluid must be changed every 3,500 miles maximum thereafter. Drain the fluid and refill the unit with approximately 4 o.z. of Paxton SL lubricating fluid and then confirm proper oil level using the dipstick. Do not overfill.

1. Ensure that the .06 in. copper sealing washer is located on the dipstick base.
2. Thread the clean dipstick into the unit until it seals.
3. Once the dipstick has seated, remove the dipstick from the unit.
4. Fluid should register in the crosshatched area on the dipstick.
5. **DO NOT OVERFILL!** Drain excess fluid from the unit if it is above the maximum level on the dipstick.

WARNING: Use of any fluid other than special Paxton lubricant will void the warranty and may cause component failure.

Important Information ◦ ***Urgent Reading***

562 ROUTE 539 ◦ CREAM RIDGE, NJ, 08514 ◦ WWW.EASTCOASTSUPERCHARGING.COM