


EAST COAST SUPERCHARGING

WWW.EASTCOASTSUPERCHARGING.COM

Install Guide: ECS C7 10-Rib Balancer Hub for Innovators West Balancers

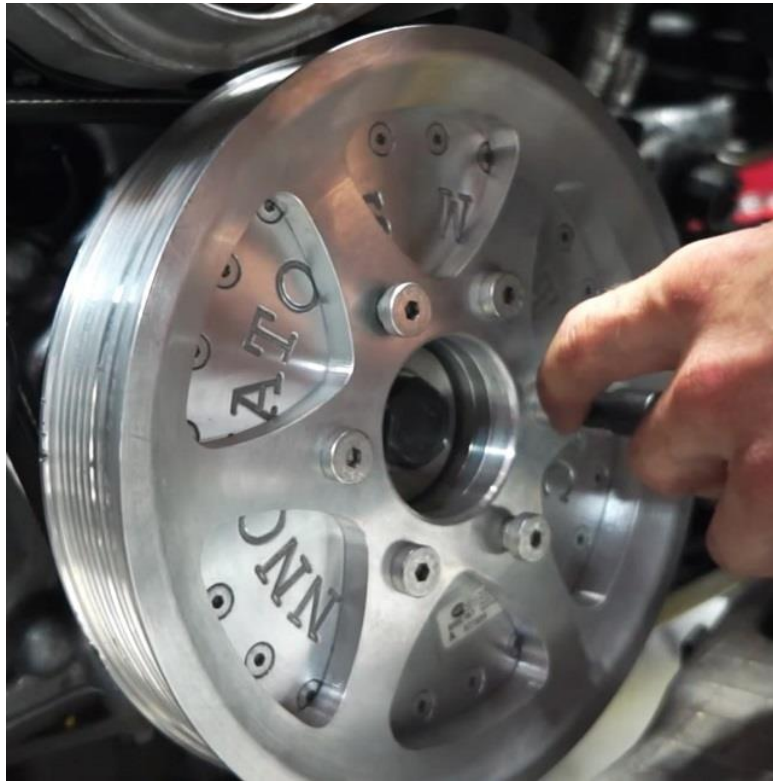

-Once Innovators West balancer has been installed according to IW instructions (IW-790 dry sump Z51 or IW-780 wet sump). Remove the six factory Innovators West inner bolts so you can install the ECS 10-Rib hub and hardware to the face of the IW balancer.

-Align ECS 10-Rib hub with the six inner 3/8 bolt holes. This is a tight fit over the IW hub make sure line up all the holes and do not let the ECS hub tilt in any one direction it must go on perfectly straight to fit over the balancer.

-Using a small amount of BLUE loctite install the new ECS supplied hardware, tightening them in a cross pattern until all six are torqued down to 30 ft-lbs of torque.

-If you have any questions please call or email sales@eastcoastsupercharging.com